
User Manual

MINI Projector

(英语)

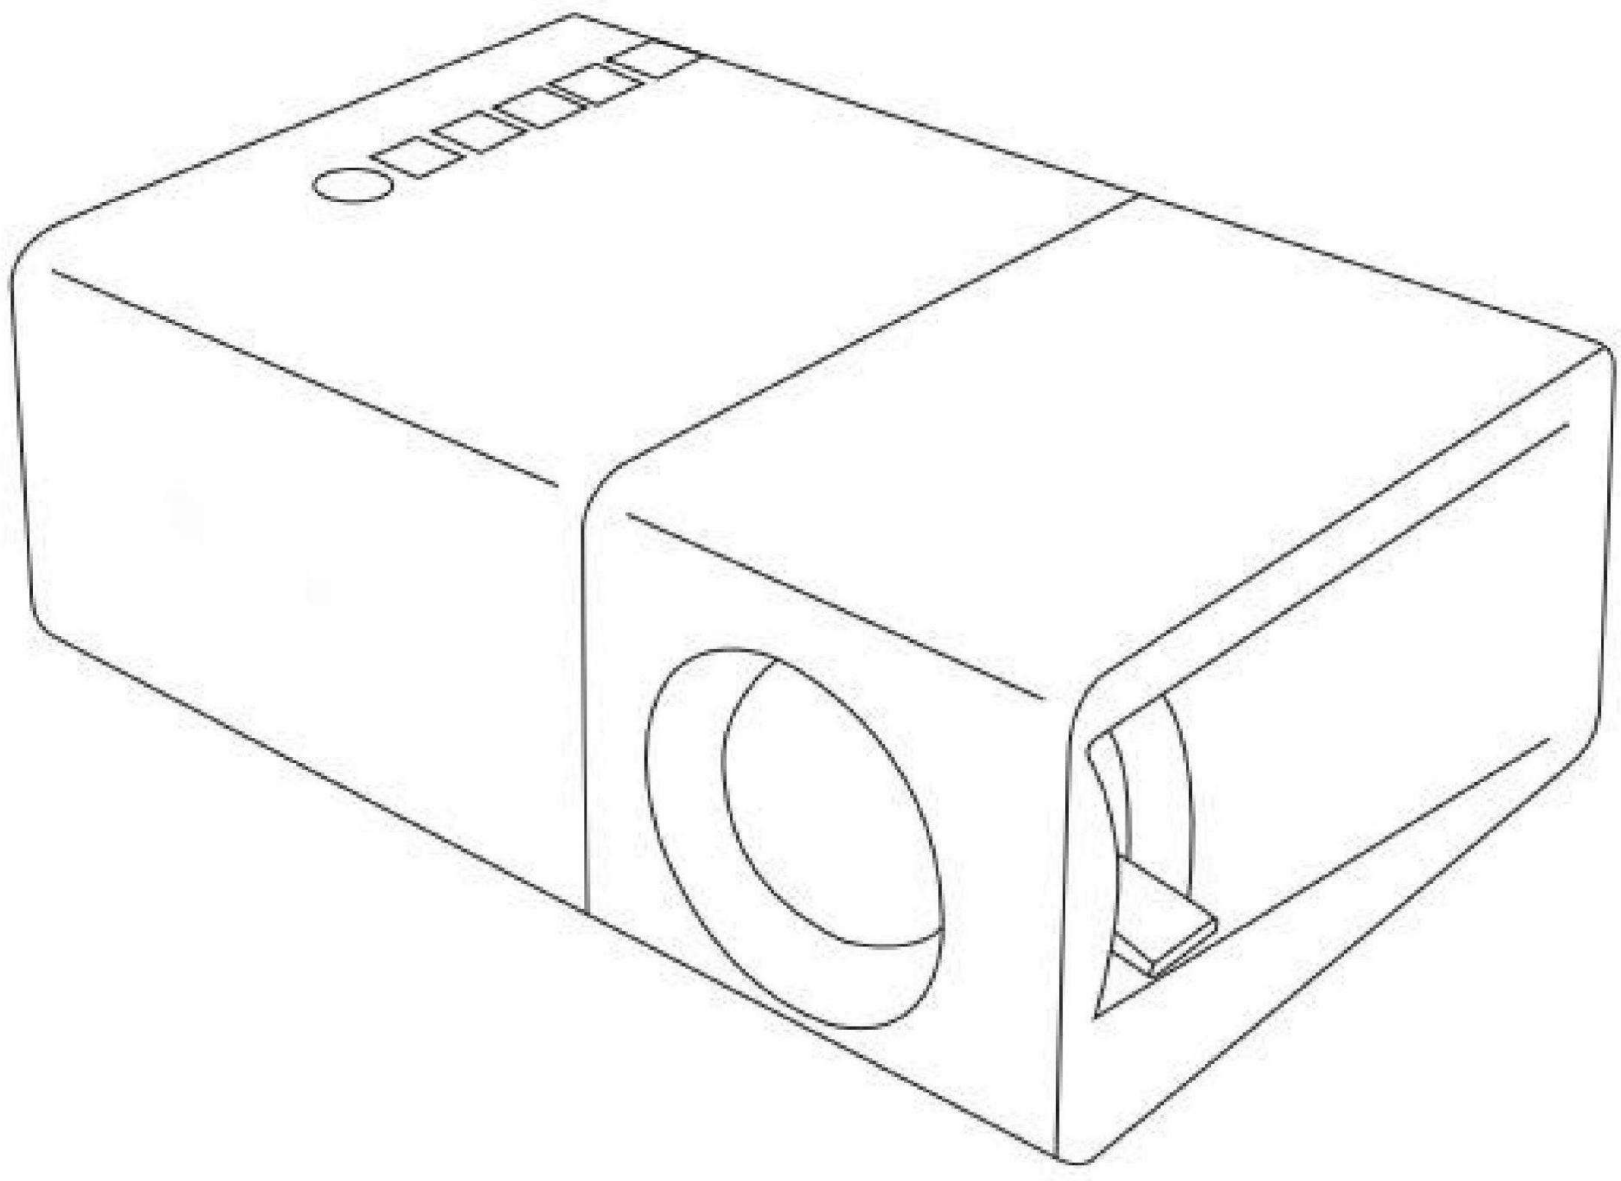

Remote Control



1.Power ON/OFF

2.Fast backward
T-shaped correction

3.Play/Pause

4.Left button

5.OK/Confirm button

6.Down button

7.Back/Exit button

8.Volume Down
button

9.Mute

10.Fas tforward
T-shaped correction

11.Up button

12.Right button

13.Menu button

14.Source button

15.Volume Up button

Power Supply


Power Adaptor

1. This product can be plugged into the power port on the back of the projector using a DC 12V-2A power adapter, and the other end into a wall socket. Make sure the power output of the wall outlet matches the power required by the adapter.


2. Micro USB interface: 5V/2A or more, and powers the projector (Note: It is recommended that the power interface and the Micro USB interface do not supply power to the projector at the same time!)

Note： If not using the unit for a longer period of time, unplug the adaptor from the wall outlet and from the unit.

User Interface

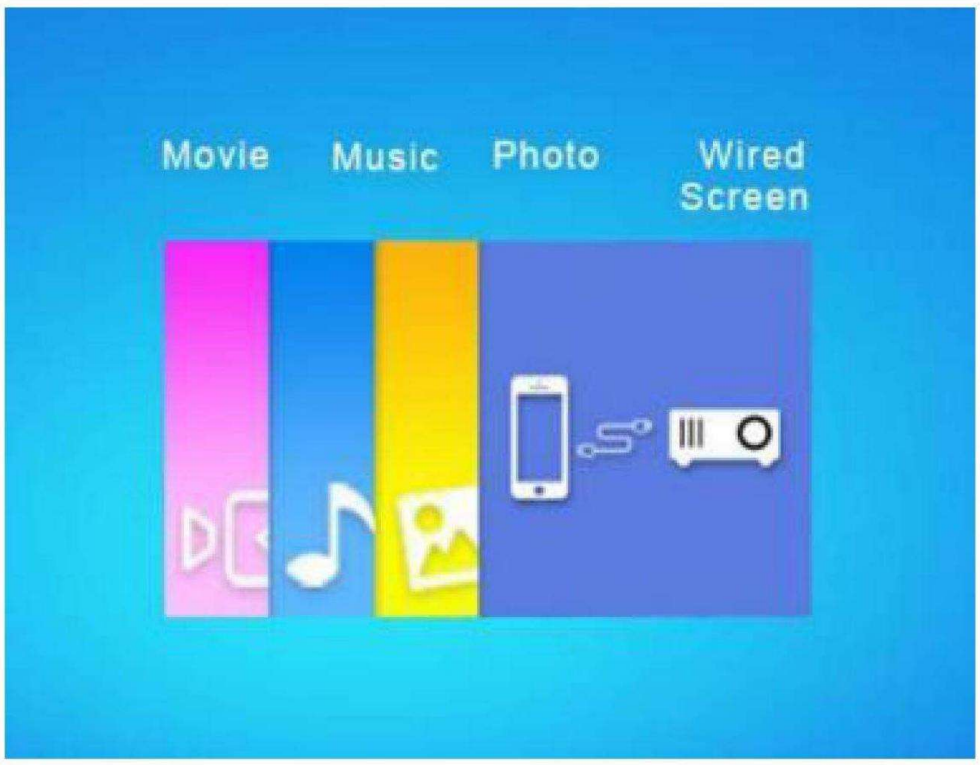

Media playback: First, insert the USB drive. In the main interface state, click "Media", and a screen as shown in the picture will appear. Select the option you need.

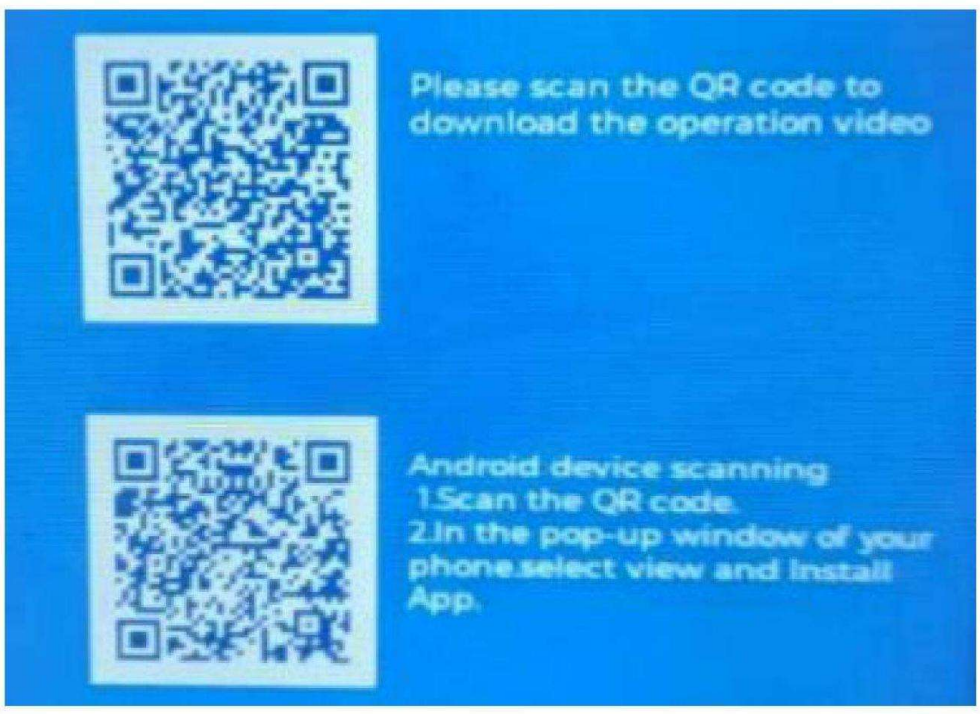

In the main interface state, click "wired screen", and a screen as shown in the figure will appear. Then, follow the instructions of the projector to operate, and you can achieve wired screen sharing.

Option Settings:



In option settings, you can use in the settings interface, you can select options in the language, set the language,can rotate the screen, side cast or ceiling type delivery and other ways, and software system upgrades.